



INSTRUCTION MANUAL

SMH-620DAB | SMH-725DAB | SMH-525DAB | SMH-550DAB | SMH-580VW

In Phase International Ltd

Car Multimedia System



android 10



Wireless
Apple CarPlay

Wireless
androidauto



Bluetooth[®]



 
WhatsApp







CONTENTS

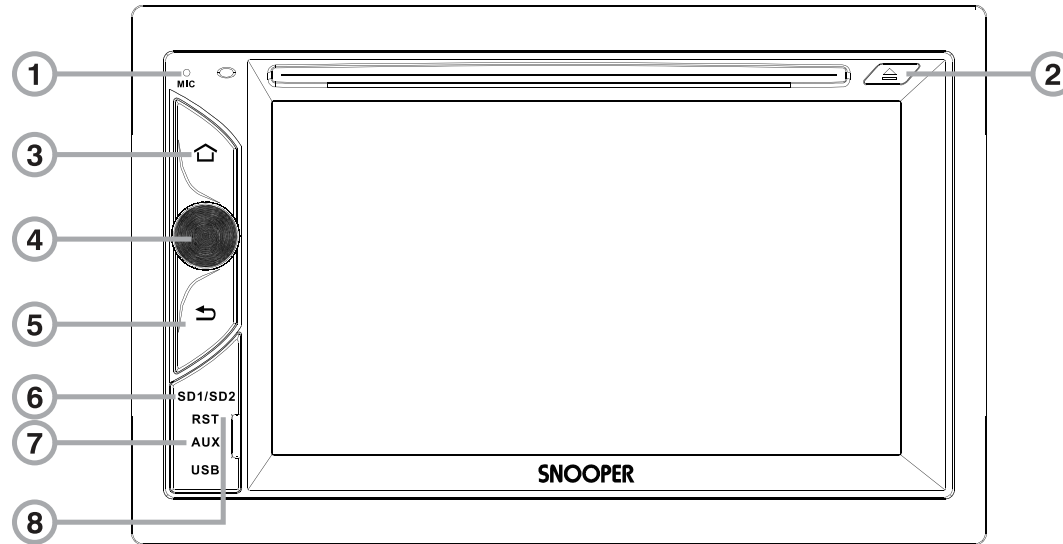
Introduction	04
Main Features	08
Main Homepage	09
System Settings	10
Radio Functions & Operation	16
DVD Player Functions (SMH-620DAB & SMH-580VW only)	18
Bluetooth Hands-Free Operation	20
Media Playing Advanced Operation	23
Car DVR Operation(Optional)	24
Files Management Operation	25
Software Install	26
GPS Navigation (SMH-550DAB & SMH-580VW only).....	27
Carplay and Android Auto	28
Accessories	32
Wiring Diagram.....	36
Warning	38

Introduction (SMH-620DAB)




①	MIC	Internal microphone
②		Disc eject slot
③		Press to return to the home screen
④		Power on and power off button, rotate it for volume increase and volume decrease
⑤		Press it for return
⑥	SD1 SD2	Micro SD card slot for media play
⑦	AUX USB	Front AUX & USB input
⑧	RST	Reset the Snooper screen system

 Introduction (SMH-725VW)

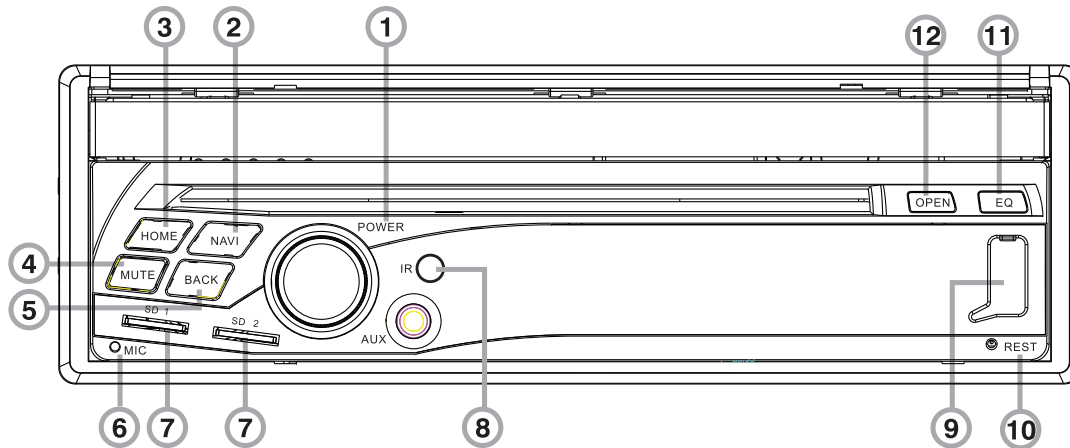


1	POWER	Power on and power off button, rotate it for volume increase and volume decrease
2	NAVI	Press it to navigation
3	HOME	Press it to return to home screen
4	MUTE	Press to mute, to unmute, press it again
5	BACK	Press to return back
6	MIC	Internal microphone input
7	SD1/SD2	Micro SD card slot for media play
8	IR	Infrared Radiation for remote control
9	USB	Front USB input
10	REST	Press to reset the Snooper screen system
11	EQ	Press to Equalizer setting
12	OPEN	Press to come out the motorized 7 inch screen

 Introduction (*SMH-525DAB & SMH-550DAB*)

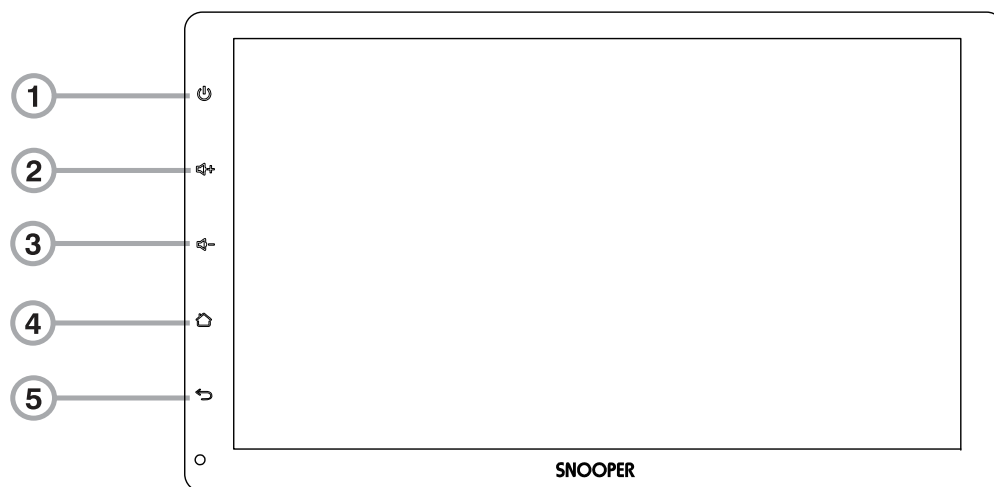

①	⏻	Touch and hold to power off, to power back on, touch it again
②	🔊+	Touch + for volume increase
③	🔊-	Touch - for volume decrease
④	🏠	Touch it to return to home screen
⑤	↶	Touch it to return back

 Introduction (SMH-580VW)

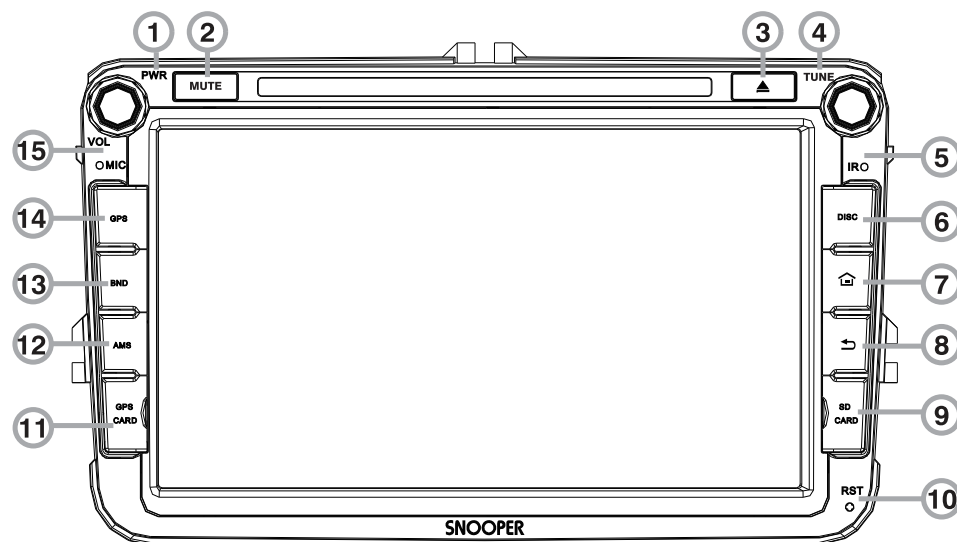


1	POW/VOL	Press and hold to power off, to power back on, press it again. Rotate it for volume increase and volume decrease	9	SD CARD	Micro SD card slot for media play
2	MUTE	Press to mute, to unmute, press it again	10	RST	Press to reset the Snooper screen system
3	▲	Disc eject slot	11	GPS CARD	Micro SD card slot for media play
4	TUNE	Switch up and down	12	AMS	Browse all current channels of the radio
5	IR	Infrared Radiation for remote control	13	BND	Radio, band switching mode
6	DISC	Press it play DVD/VCD/CD player	14	GPS	Go to Navigation application
7	🏠	Press it to return to home screen	15	MIC	Internal microphone input
8	↩	Press it for return			

Main Features



 Capacitive Touchscreen- 24-bit true colour digital touchscreen, fast responsive and vibrant colour display.

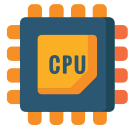

Octa-core processor- the brain of the head unit. Super-fast and optimised for highly demanding tasks



Android Auto- Full access to Android Auto via Speedplay. Can be wired (USB) or Wireless.



 
 
Apple Car Play- Full access to Apple Car Play- via Speedplay. Can be wired (USB) or Wireless.



Built in Navigation - Navigate in over 50 countries with the inbuilt Navigation

Main Homepage



When you power on the headunit, it will enter a main interface. The interface can slide left or right. Please select the icon to enter relevant function for operation. Please note, the stereo may go through graphical design changes in the layout without notice. Whereas function will be kept, icons may be different as 3rd party app developers update their respective apps.

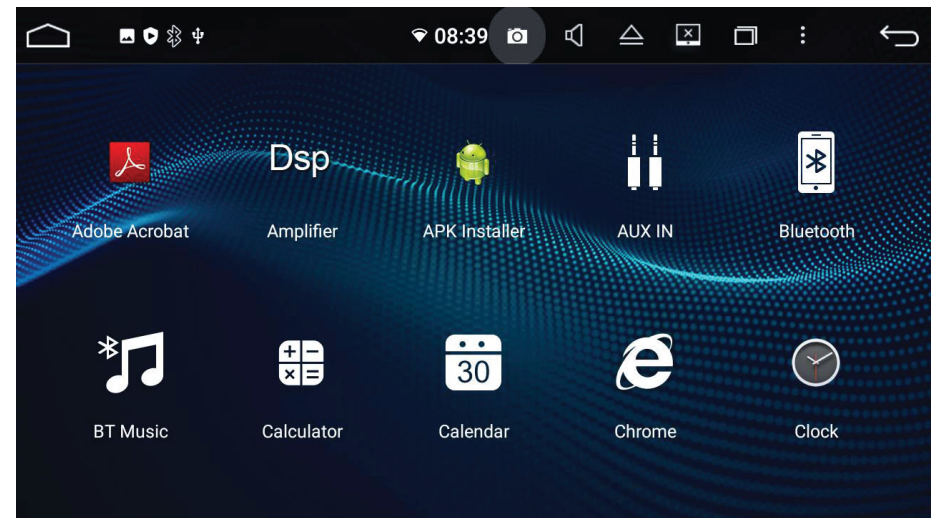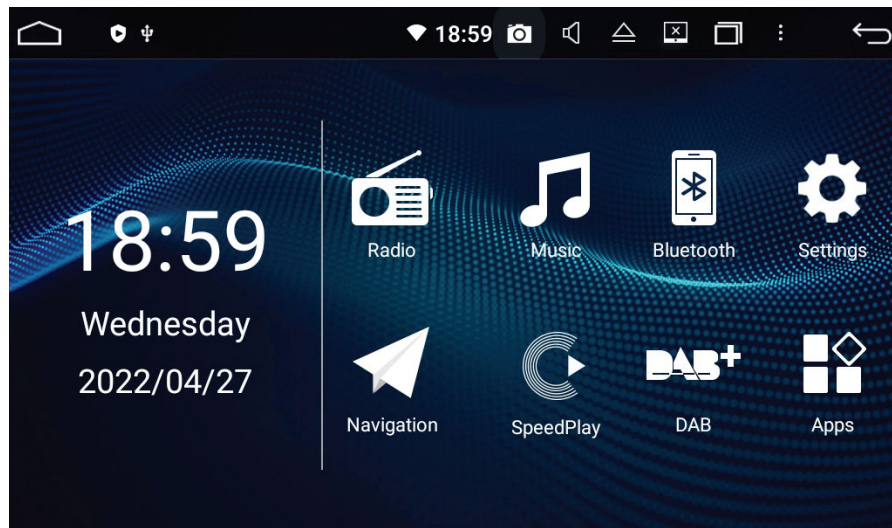

System Settings ¹

In most applications, the default settings are OK to use as is. The below are the main system settings you can configure.

  
Press the setting icon (⚙️) to enter the main settings interface. It will look like the below pictures:

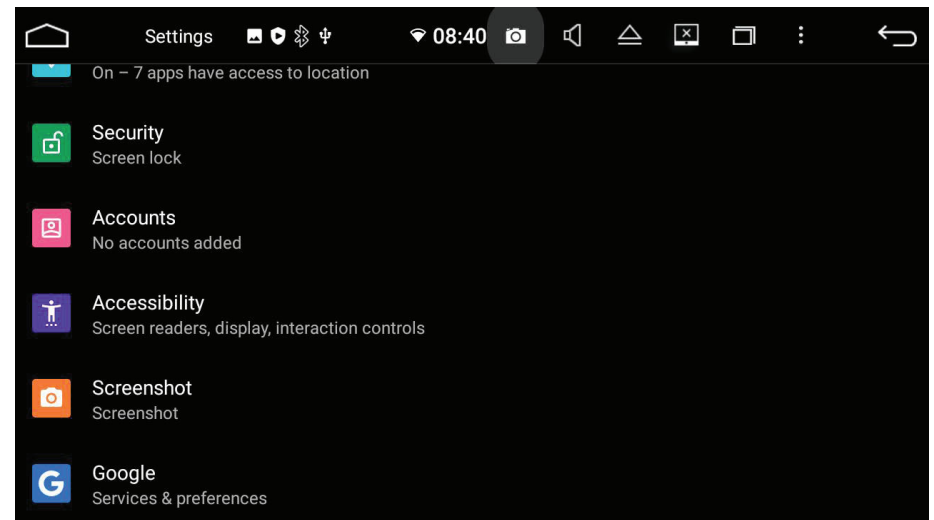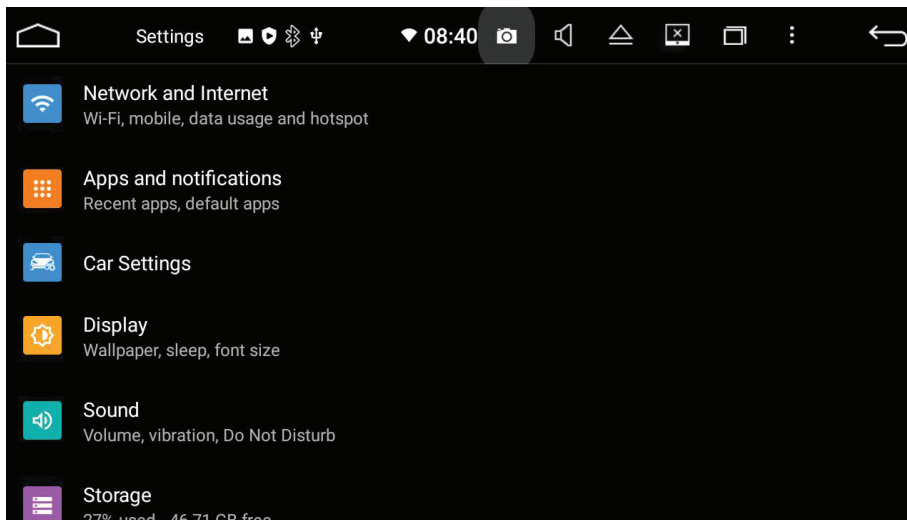

System Settings²

WiFi Settings:


 
Press "Network and Internet" > Switch WiFi on > Press WiFi to show available networks > select network you wish to connect to (you will have to enter a network password)> When successful, WiFi Icon will show at the top

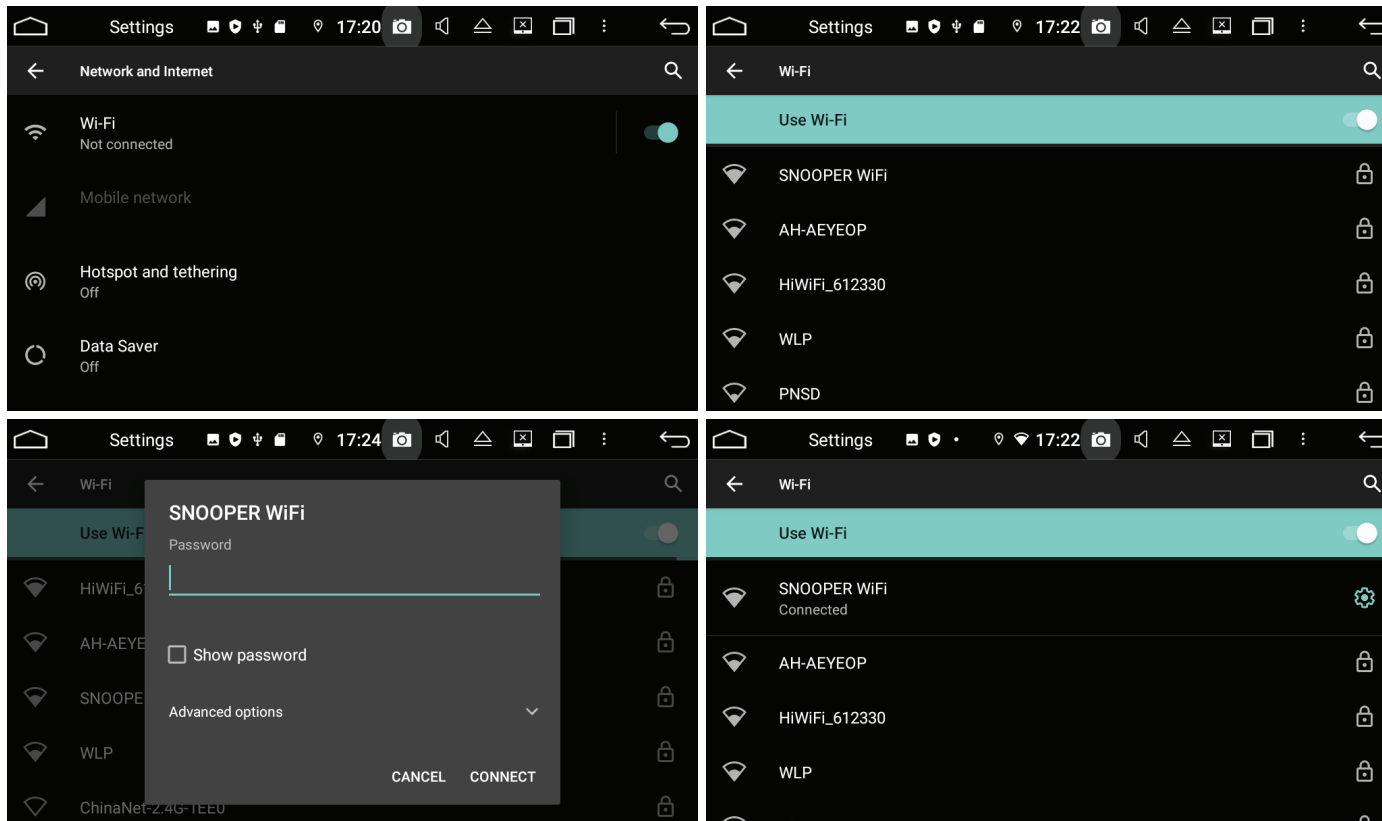

System Settings³

Apps and Notifications:

  Select "Configure App notifications" > Select notifications > Select the app you wish to configure
Select "Configure App notifications" > "Select Permission Manager" > Select the app you wish to configure

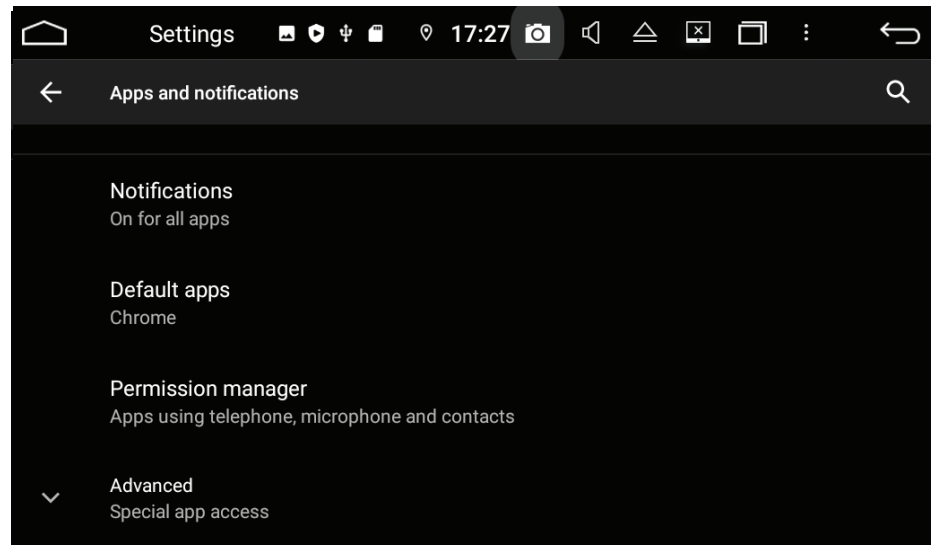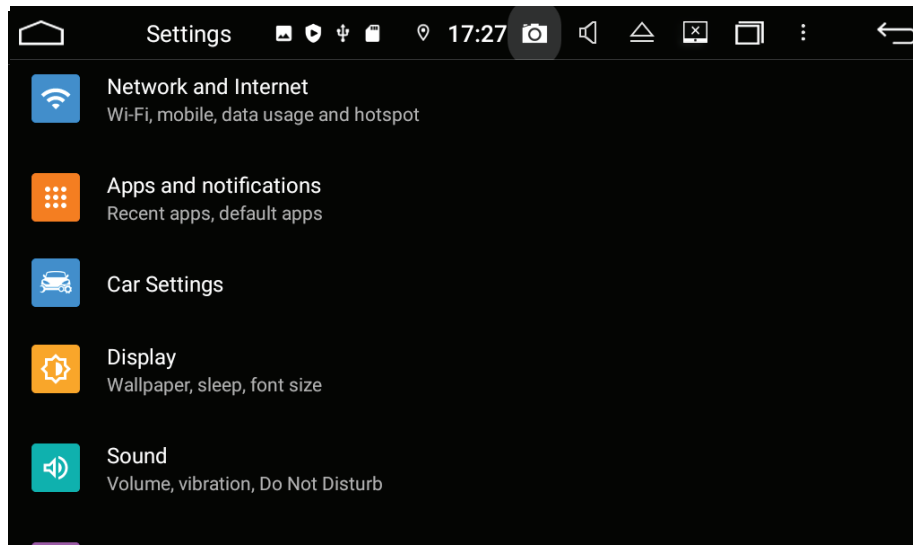

Car Settings:

Configure Personal settings, default navigation app, driving settings.
Enter car settings > Select the feature you want to configure

System Settings ⁴

Display:

Adjust brightness levels, wallpapers and font size.

Sound:

Adjust System volume and touch sounds.

Storage:

Check current storage status and free up space if needed.

Location:

Change location settings and permissions.

Security:

Set passwords and screen lock type.

Accounts:

Add Google account for App and email sync. ***Not recommended if the vehicle is shared.***

System Settings ⁵

Accessibility:

Configure your accessibility needs with this setting. For example, colour correction, text to speech, font size and magnification.

Google:

Configure your google preferences and services via this setting. *(it will open a new window)*

System:

Adjust Date and time, languages, factory reset and backup.

About Machine:

System updates, Status, Legal information, Model number, Android version, Baseband version, Kernal Version and Build number

System Settings⁶

This Snooper stereo has a fully customisable audio output. Please follow the below steps to access the amplifier settings.

Enter the **"amplifier"** app on the apps menu > Enter the setting you want to (choose from special effects, sound field, settings, sound effects, EQ and balance controls) > Adjust said setting to required taste.

Please Note: These settings will ideally need to be set by an experienced car audio installer. If you are fitting this as a DIY install or have little to no experience with audio tuning, please use the presets on the menu.

Audiophiles...have fun!



Radio Functions & Operation ¹

 
To play the radio, adjust station and scan, it is very simple.

To Scan:

Adjust brightness levels, wallpapers & font size.

To Select Station:

Short press the **"Radio"** button on the home screen > press the desired radio frequency.

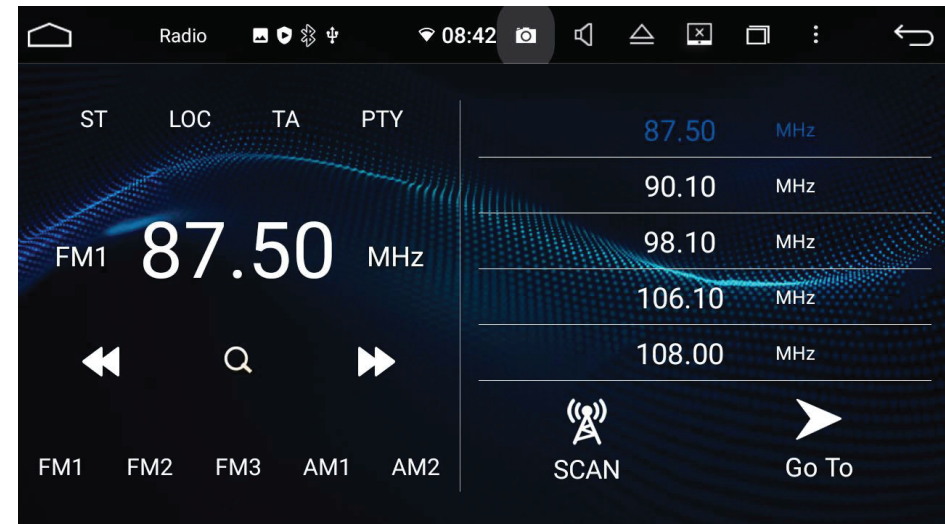

Manual Station Search:

Short press the **"Radio"** button on the home screen > Press the left/right arrow to manually search for radio stations.

Auto Search:

Short press the **"Radio"** button on the home screen > press the magnifying glass to search (lowest frequency to highest) and press again to stop searching.

Radio Operation ²

Radio Station Presets:

Each wave band can store 6 pre-set stations. The system can totally store 24 pre-set station total (18 FM station and 6 AM station).

Stereo/Mono Conversion:

FM radio signals are generally stronger in cities, so keep in stereo mode. When in remote areas, stereo is weaker so switch over to Mono.

Short press the ***"Radio"*** button on the home screen > Press ***"ST"*** for desired mode.

Local Radio Receiver:

FM radio signals are generally stronger in cities, so keep in stereo mode for LOC. When in remote areas, stereo is weaker for LOC mode so switch over to Mono. This headunit can switch automatically between


Short press the ***"Radio"*** button on the home screen > Press ***"LOC"*** for desired mode.

 
DVD Player - Basic Operation *(SMH-620DAB & SMH-580VW Only)*

Quick Tips:

If playback issue occurs, please remove the disc, and try another disc. If the other disc plays, you may have format incompatibility issues. If both discs fail, both may be in the wrong format.

Disc Entry/Exit

Take the disc (label side up), then softly insert the disc into disc slot. The system will draw and read the disc automatically after it detects the disc has been correctly inserted. After few seconds, the system will play the disc automatically. Press the Exit key on panel of the product to eject the disc from the disc drive. If the disc is not removed in five seconds, the system will try to eject the disc but will not automatically play the disc. Only by pressing the  key and re-inserting the disc into disc slot, the system will automatically play the disc.

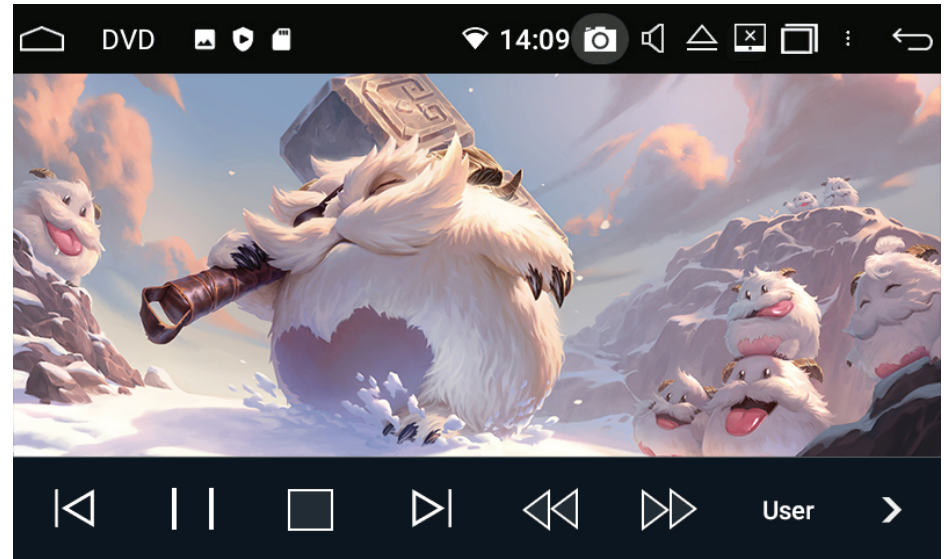

DVD Player - Basic Operation

Playing/Pause:

In the state of playing the disc, USB media or SD card, softly press the ►|| key at the bottom of media control interface to pause playing or continue playing.

Chapter Selection:

In the state of playing the disc, USB disc or SD card, softly press the ◀▶ keys to play the previous or next chapter of current-playing chapter.

High-speed Fast Forward/Fast Backward control:



When the media is playing, long press ►| key at the bottom of media control interface continuously to enter fast rewind x2 / fast rewindx4 / fast rewindx8 / fast rewind x20

In the state of fast rewind playing, press key to resume to normal playing state. Softly press the ►|| key of media playing control interface to enter & run next chapter, subtitle switch, language switch, or repeat of current chapter.

Bluetooth Hands - Free Operation ¹

Bluetooth Paring and Connection:

  
Turn on the Bluetooth function of the mobile phone> Search for the stereo on the Bluetooth settings on the phone> It should show "Snooper BT" (if detecting the stereo)> When connecting with mobile phone, input the universal code "0000" and confirm it > After the mobile phone has been paired and connected with the product successfully, the Bluetooth icon will appear on the top of interface

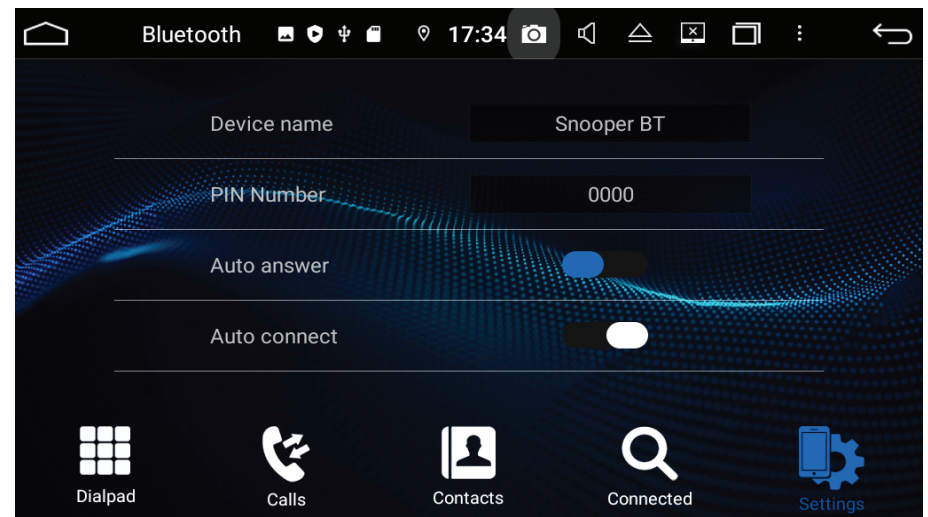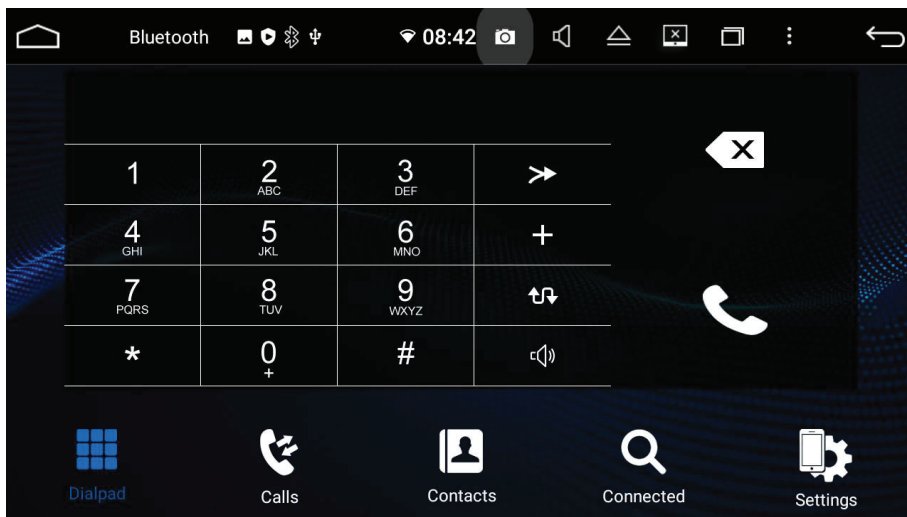



Bluetooth Hands - Free Operation ²

 
Dialing:

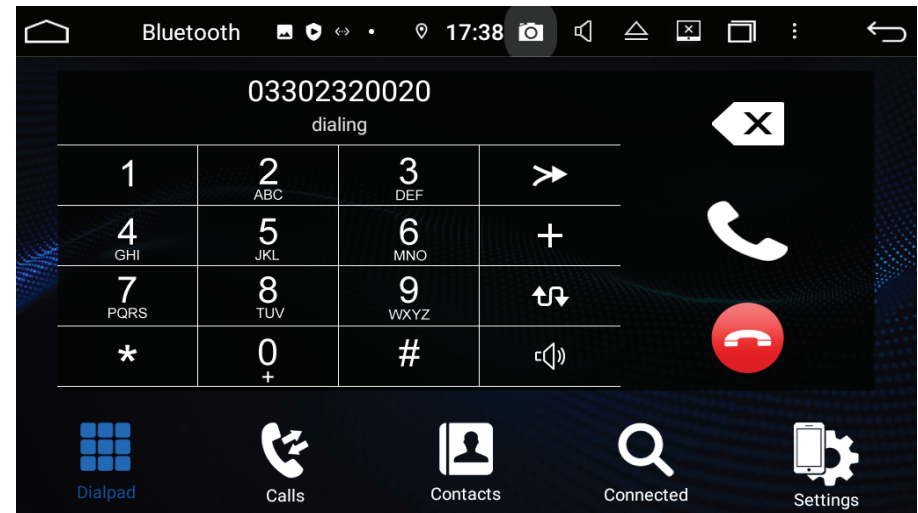After the Bluetooth hands-free system connects with mobile phone's Bluetooth, you can dial directly by phone or touch screen's number keys. Pressing key on Bluetooth interface can enter the dialling interface too, as below picture



Receive / Hang up / Stop Phone:

For receiving an incoming call, the system will switch to Bluetooth hands-free interface from any other mode, meanwhile, the playing sound of previous mode will switch to ring tone of incoming call, and the phone number will display on the screen, Press the  on touch screen to receive phone. Press  to hang up phone.

In the process of calling, Press the icon to stop phone. Voice switch between mobile phone and speaker of the player. In the process of calling, press the  on touch screen to switch the voice between mobile phone and speaker of the player.

Bluetooth Hands - Free Operation ³

 
 
Dialled Phone Record and Phone book

Press  of Bluetooth main interface to check the dialled phone record.

Press  of Bluetooth main interface to enter into phone book interface

Bluetooth Music Playing:



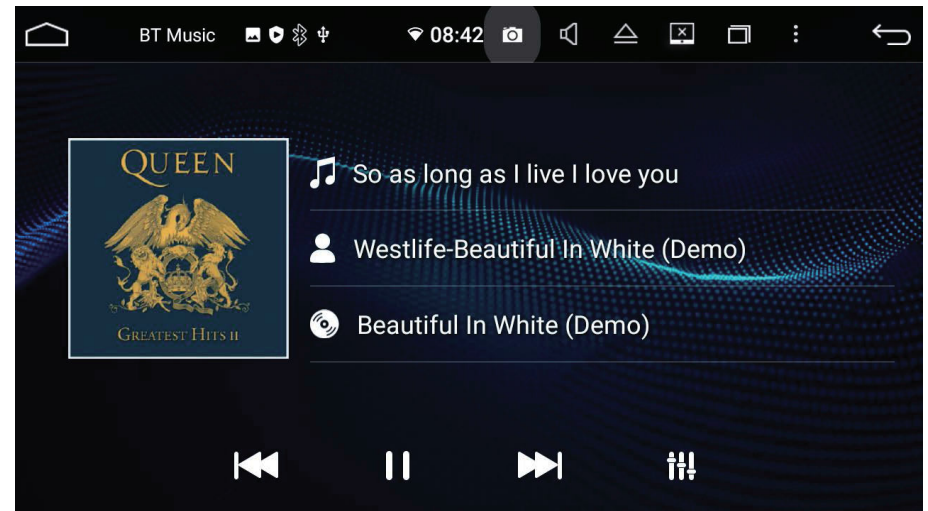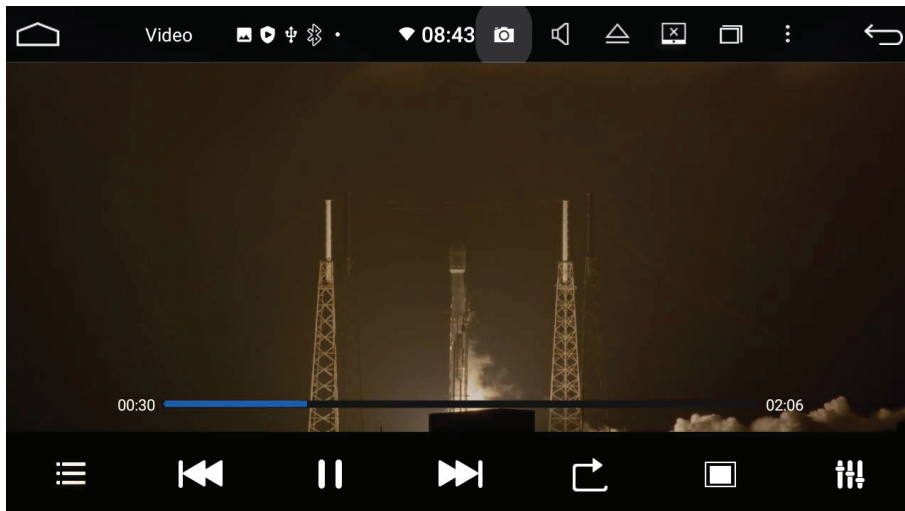





If the mobile phone supports Bluetooth music streaming function, please transfer the audio playback to the product for playing music of mobile phone. (This is done via your smartphone)



Media Playing Advanced Operation


Media Playing Advanced Operation:

Press on the media playing icon to play the video files and files from SD card or USB Stick. It supports MP4, AVI and 1080P HD video playing format.

Touch  icon to enter full-screen playing, press  icon to stop playing to play or stop playing, press  /  icon to select previous or next chapter, press  icon to play or stop playing,  icons to delete files.  icon to add video files.  icons to check video files list and click to select and play the file.

 
USB Disk Playing Operation:

Insert the USB disk with media information (MP3, MPEG4, JPEG) into USB port of the product to play it, the screen will show the media playing interface as the below picture:

Press on the music playing icon to play the audio files from SD card or USB disk. It supports MP3, WMA, etc. Touch the  icon to select playing mode

Press  icon to select sound mode. Press  /  icon to select previous or next chapter.


Press the  icon to play or stop,  icon to check the files list.

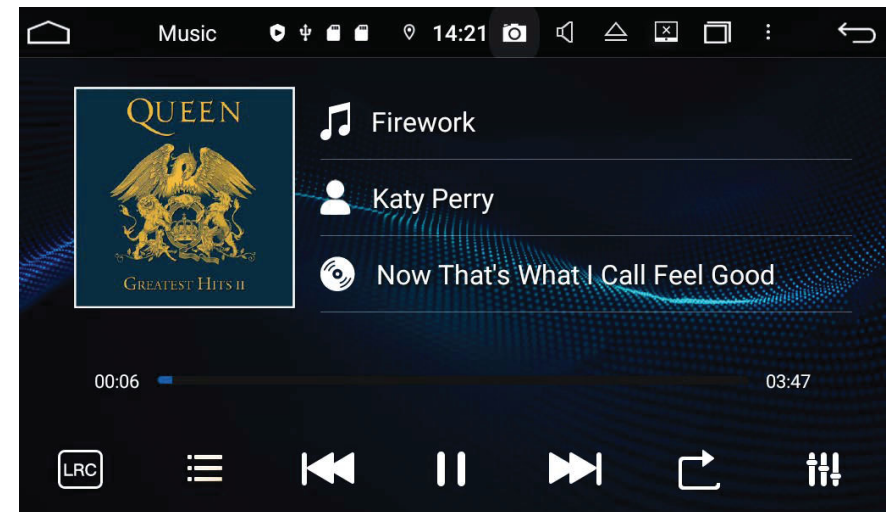

Car DVR Operation(Optional)

The video of car DVR are stored in SD card and most files are big, so please use at least 8GB TF card to record the video for long time automatically.

 The product can automatically detect the car DVR when it is connected via USB interface.

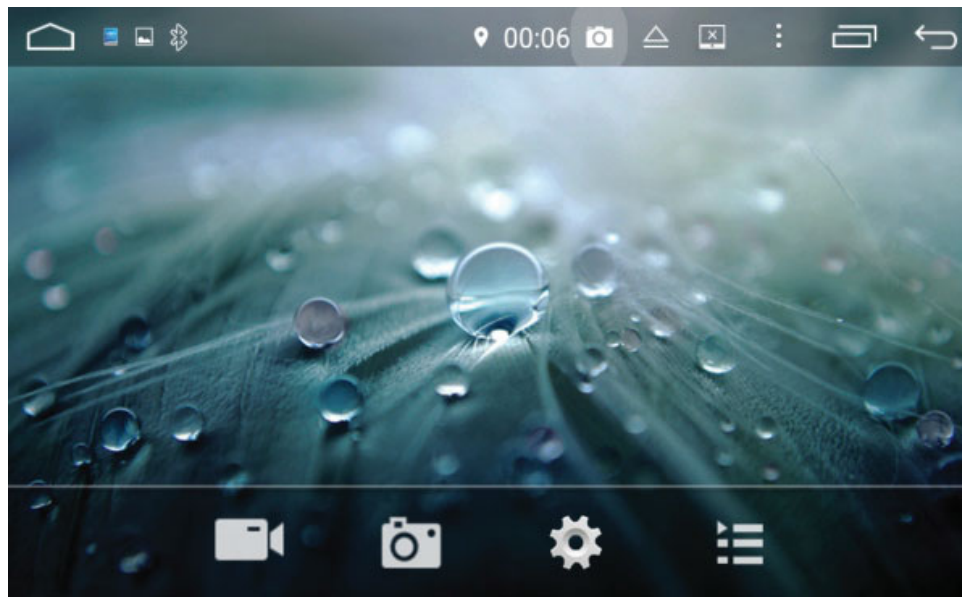


Press the  icon to start recording video, the files can be stored automatically after stop recording.





Press the  icon to check the recorded video list.

 The displays time, longitude, latitude and speed are displayed on the left side of video playing interface.

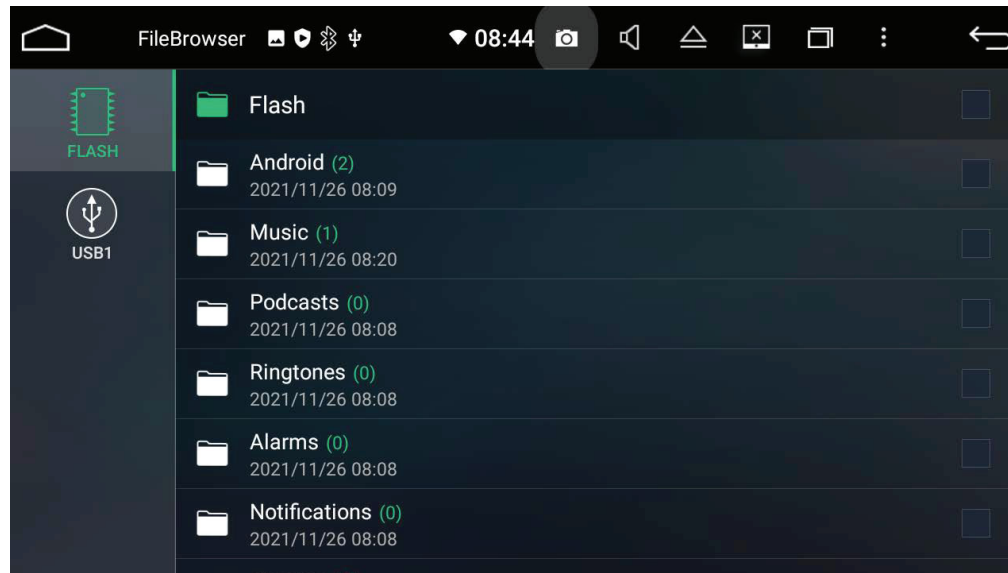Files Management Operation

Enter into file management operation interface,as the below picture:



Press the  icon to select the files to remove, select the copy icon , then the paste  icon to copy and paste files, When you don't need the file, press the deleting icon  to delete it.

Software Install

You can download the application software from PC or Internet through the network connection,- Copy the download software to SD card or USB disc, then insert it into the card slot of the player or connect it.

Then press on the file management to select the software from SD card or USB downloaded application via USB connection.

Long press the APK installation package to install the software.

 
Browser

After you connecting "hard driver", "SD ", "USB", "photos", "movie" and "Tool", connect, then press "File Manager", you will read the content.

Press "Browser" Open " Google" inter page

You can enter into different websites, then web searching read news, know the newest current events, stock inquiries

Press the icon to open the map you installed.

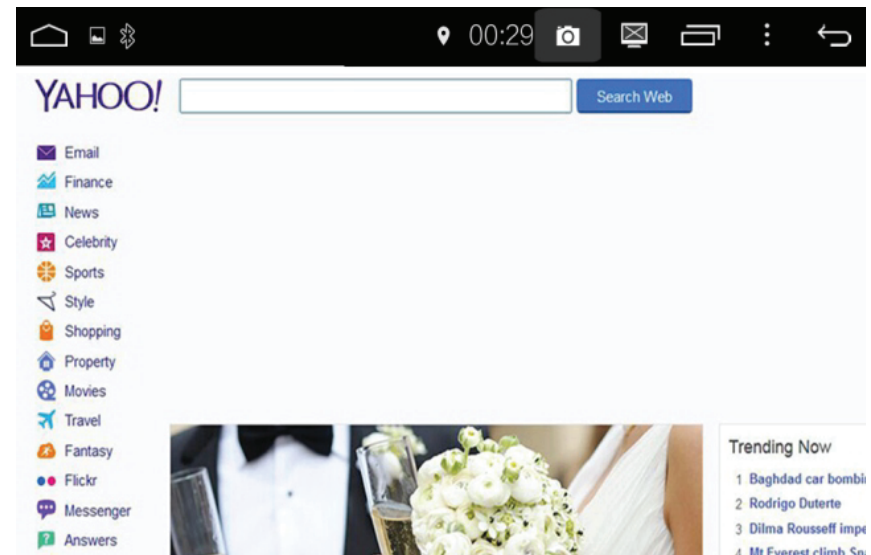


GPS Navigation (*SMH-550DAB & SMH-580VW Only*)

 
 
SMH-550DAB & SMH-580VW has built in GPS Navigation.
Select Snooper Nav App and follow the onscreen instructions.




Carplay and Android Auto ¹

 
The content of the smartphone can be displayed on the stereo, the mobile phone and the car audio are controlled by each other (the Apple system is one-way control), and it can also be equipped with wired and wireless Carplay and Android Auto. Fully compatible with different versions of iOS and Android.

Wired Carplay - Enter "Speedplay" app from the app menu>Take the iPhone original USB cable>plug into the "Apple Car Play/Android Auto" USB port (other USB port cannot work with car play)> Touch  icon to connect successfully.

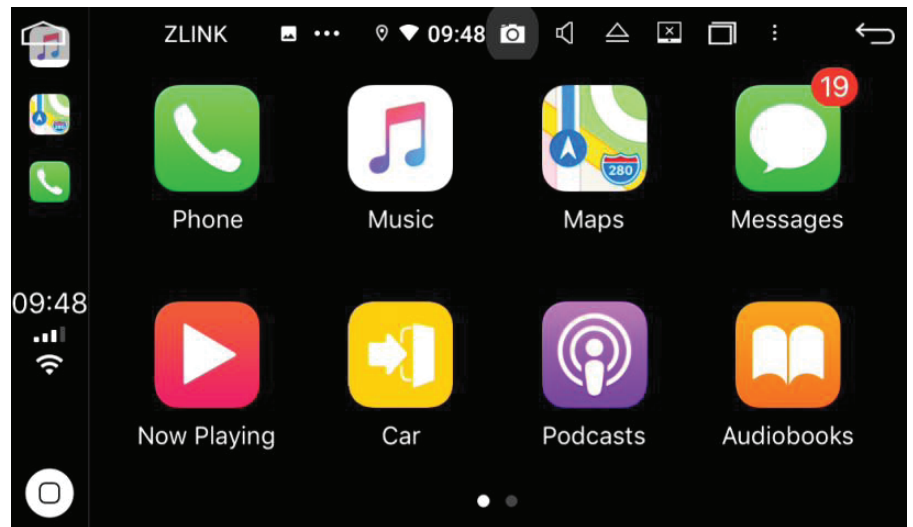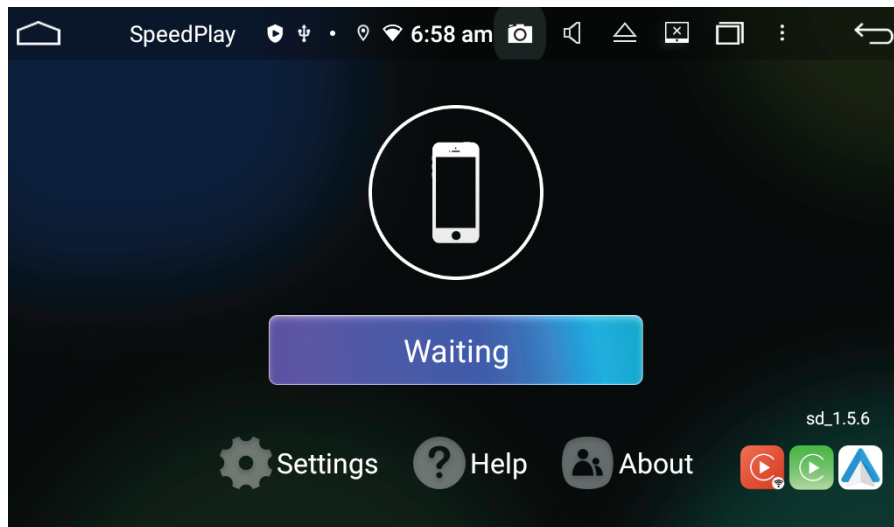


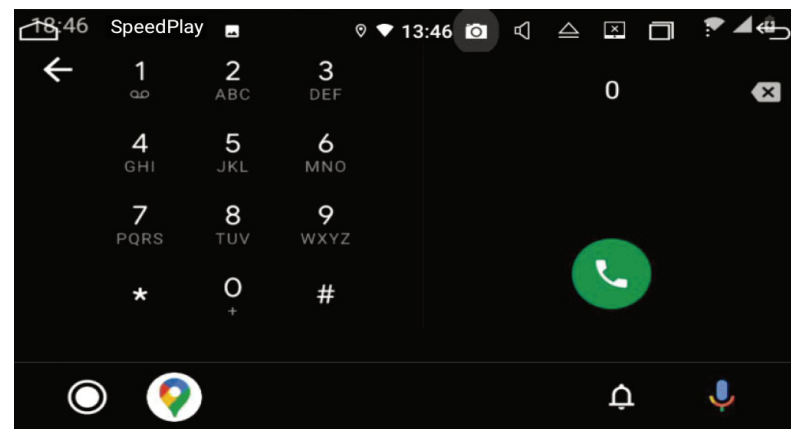 
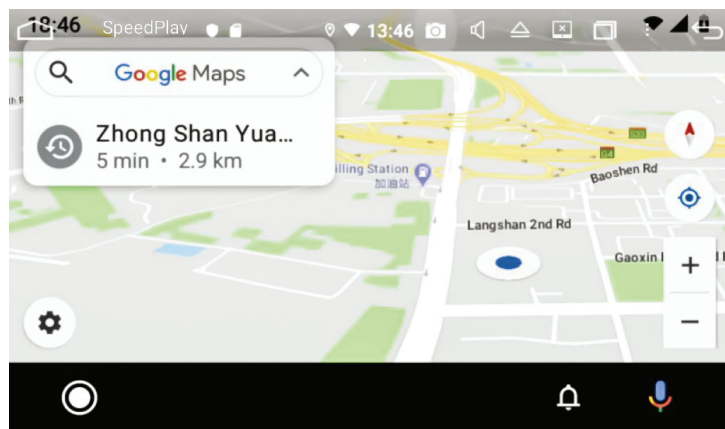 
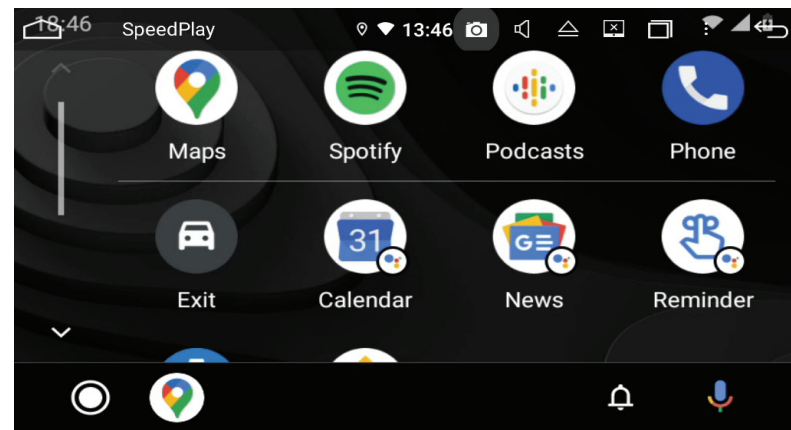 
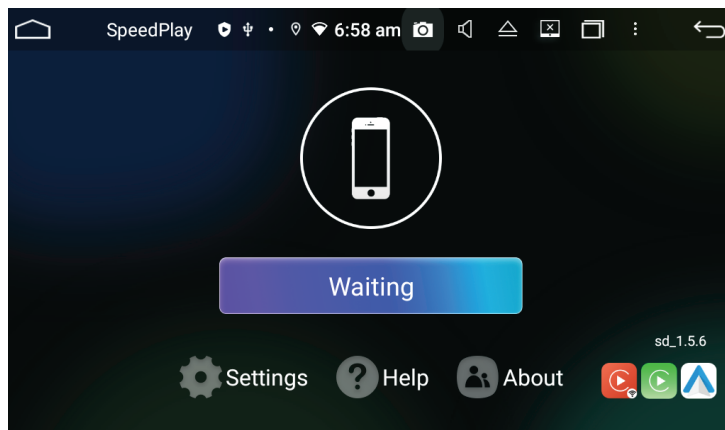 
Carplay and Android Auto ²

Wireless Car Play - Go to your iPhone Bluetooth settings>switch on Bluetooth> Pair the iPhone, Touch  icon, complete pairing, then it should connect successfully.

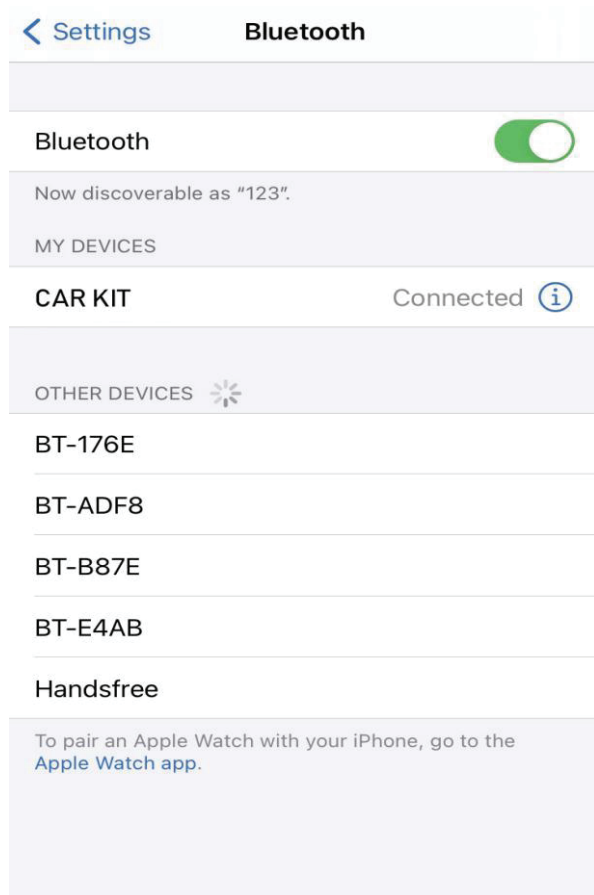

 
 
Carplay and Android Auto³

Wired Android – Take the Android original USB cable > plug into the “Apple Car Play/Android Auto” USB port (other USB port cannot work with car play)> Enter “Speedplay” app from the app menu)> Touch  icon to connect successfully.




Carplay and Android Auto ⁴

Wireless Android Auto – Go to your Android Bluetooth settings> switch on Bluetooth> Pair the smartphone> Touch  icon to complete pairing, then it should connect successfully.

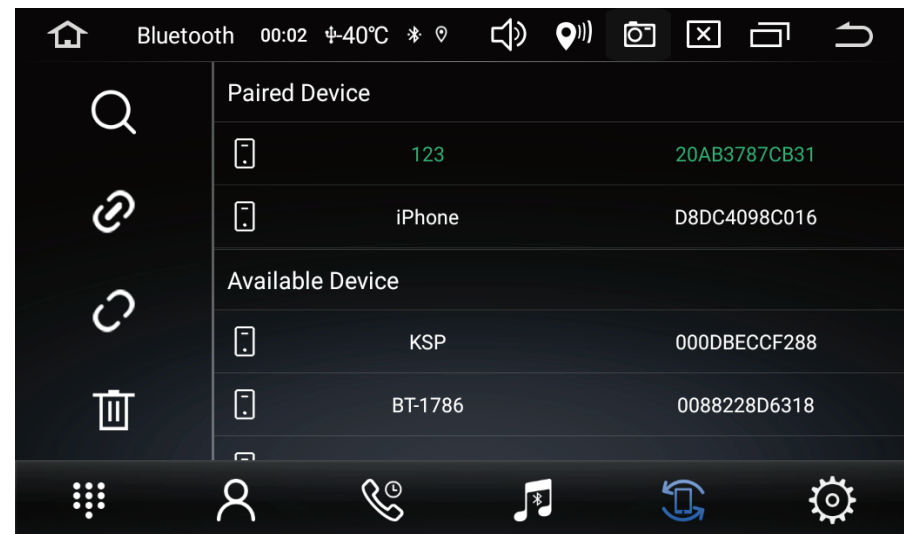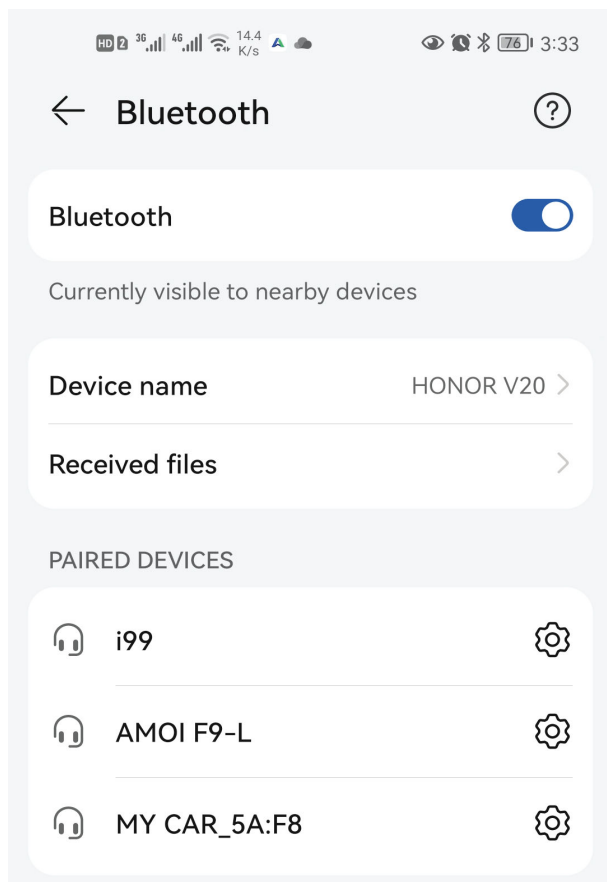

Accessories (SMH-620DAB)

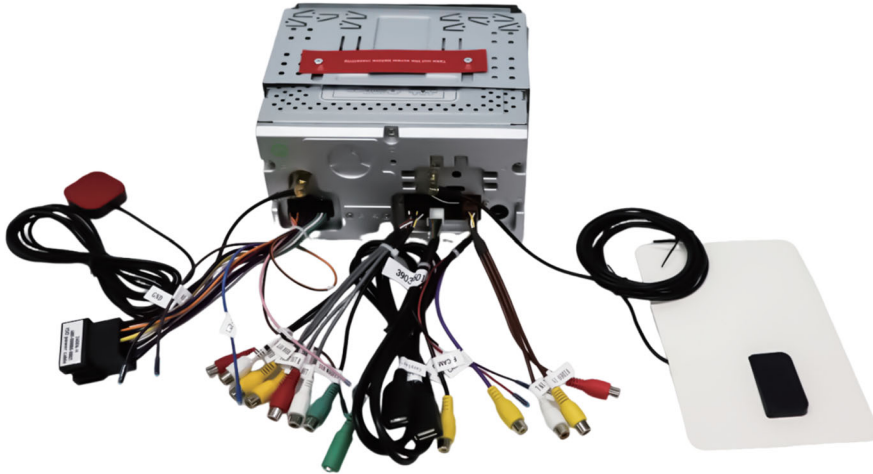 

- RCA Cable
- Removal Key
- GPS Antenna (5m)
- ISO Wiring Harness
- Aux In Cable
- Camera In Cable
- DAB Antenna (3m)
- Plastic Surround Frame
- Remote Control
- Installation Sleeve
- External Microphone (3.5m)
- 2 USB+Microphone Cable (1m)

(Note: For safety reasons the battery is not included with the remote control, battery required is lithium cell battery 3V CR2025.)

 
Accessories (SMH-725DAB)



- RCA Cable
- Remote controller
- Installation Sleeve
- Removal Key
- GPS Antenna (5m)
- External Microphone (3.5m)
- ISO Harness
- USB+CAM IN Cable
- External USB DAB+ Box With DAB Antenna

(Note: For safety reasons the battery is not included with the remote control, battery required is lithium cell battery 3V CR2025.)


Accessories (SMH-525DAB & SMH-550DAB)

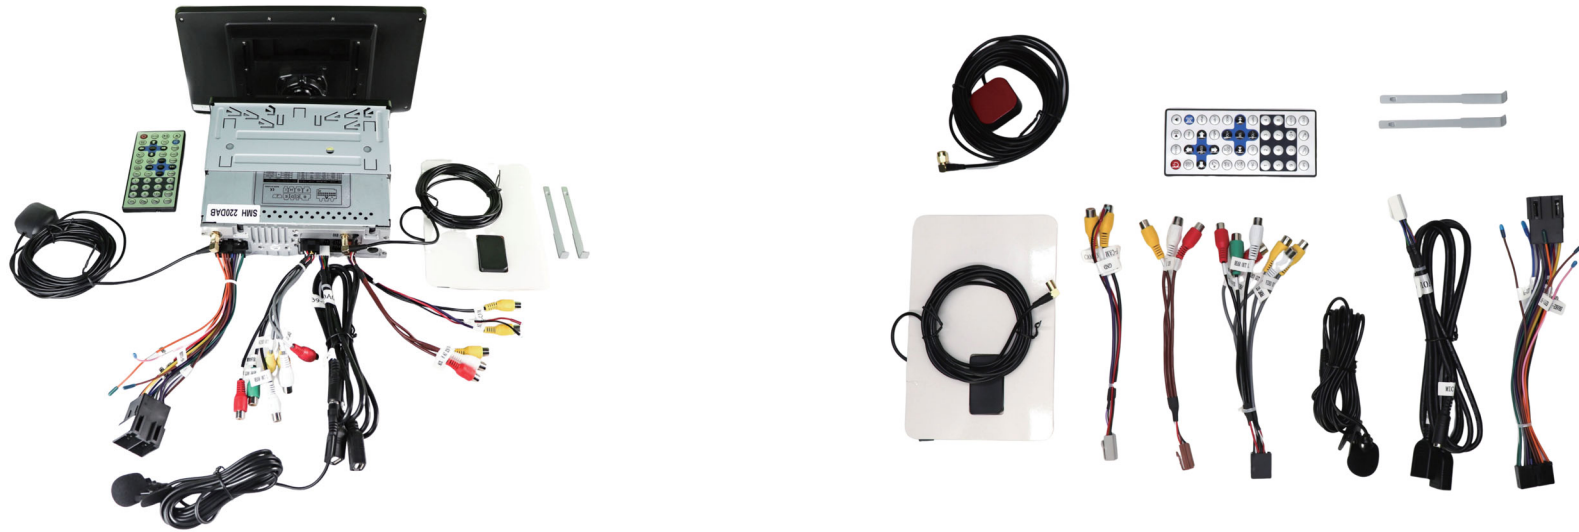

- RCA Cable
- Removal Key
- GPS Antenna (5m)
- 2 USB+Microphone Cable (1m)
- Aux In Cable
- Camera In Cable
- DAB Antenna (3m)
- Installation Sleeve (WxHxD 182*53*85mm)
- Remote Control
- ISO Wiring Harness
- External Microphone (3.5m)

(Note: For safety reasons the battery is not included with the remote control, battery required is lithium cell battery 3V CR2025.)

 
Accessories (SMH-580VW)

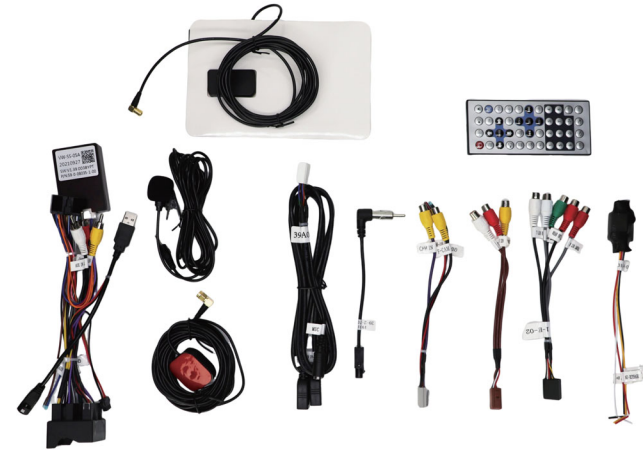


- RCA Cable
- Camera In Cable
- External Microphone (3.5m)
- Aux In Cable
- DAB Antenna (3m)
- 2 USB+Microphone Cable (1m)
- Remote Control
- GPS Antenna (5m)
- VW Harness and CanBus x 2 T5/T6 Set

(Note: For safety reasons the battery is not included with the remote control, battery required is lithium cell battery 3V CR2025.)

 Wiring Diagram (SMH-620DAB, SMH-525DAB, SMH-550DAB, SMH-580VW)

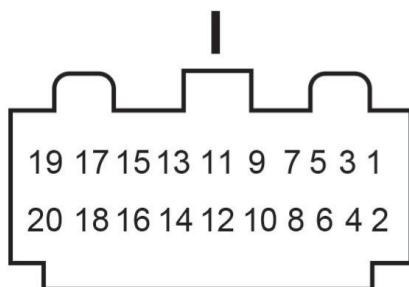

WIRE	FUNCTION	WIRE	FUNCTION	WIRE	FUNCTION	WIRE	FUNCTION
1	RL+	6	FR-	11	KEY2	16	ACC
2	RL-	7	RR+	12	GND	17	RX
3	FL+	8	RR-	13	KEY1	18	TX
4	FL-	9	ANT	14	GND	19	BACK
5	FR+	10	B+	15	ILL	20	BRAKE

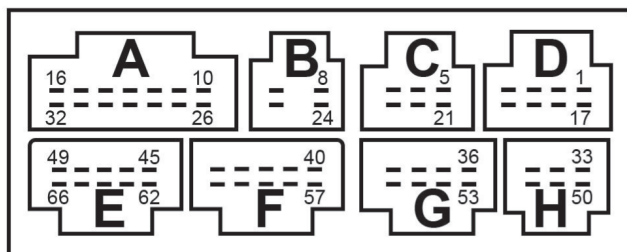 

WIRE	FUNCTION
	NC

WIRE	FUNCTION
	NC

WIRE	FUNCTION
	NC

WIRE	FUNCTION
	NC


WIRE	FUNCTION	WIRE	FUNCTION
10	NC	26	NC
11	NC	27	VOUT 1 (Optional)
12	SUB WOOFER GND	28	VOUT 2 (Optional)
13	SUB WOOFER	29	VOUT GND
14	RCA GNG	30	RCA OUT RR
15	RCA OUT FR	31	RCA OUT RL
16	RCA OUT FL	32	RCA GND

WIRE	FUNCTION
1	AUX L
2	AUX R
3	AUX VIDEO
4	NC
17	AUX GND
18	NC
19	NC
20	NC

WIRE	FUNCTION
40	MIC-
41	USB GND
42	USB DM(green)
43	USB DP(white)
44	USB_5V
57	MIC+
58	USB GND
59	USB DM2(green)
60	USB DP2(white)
61	USB_5V

WIRE	FUNCTION
33	GND
34	F-CAM GND
35	CAM IN GND
50	F-CAM 12V
51	F-CAM IN (Optional)
52	CAM IN VIDEO

 Wiring Diagram (SMH-725DAB)

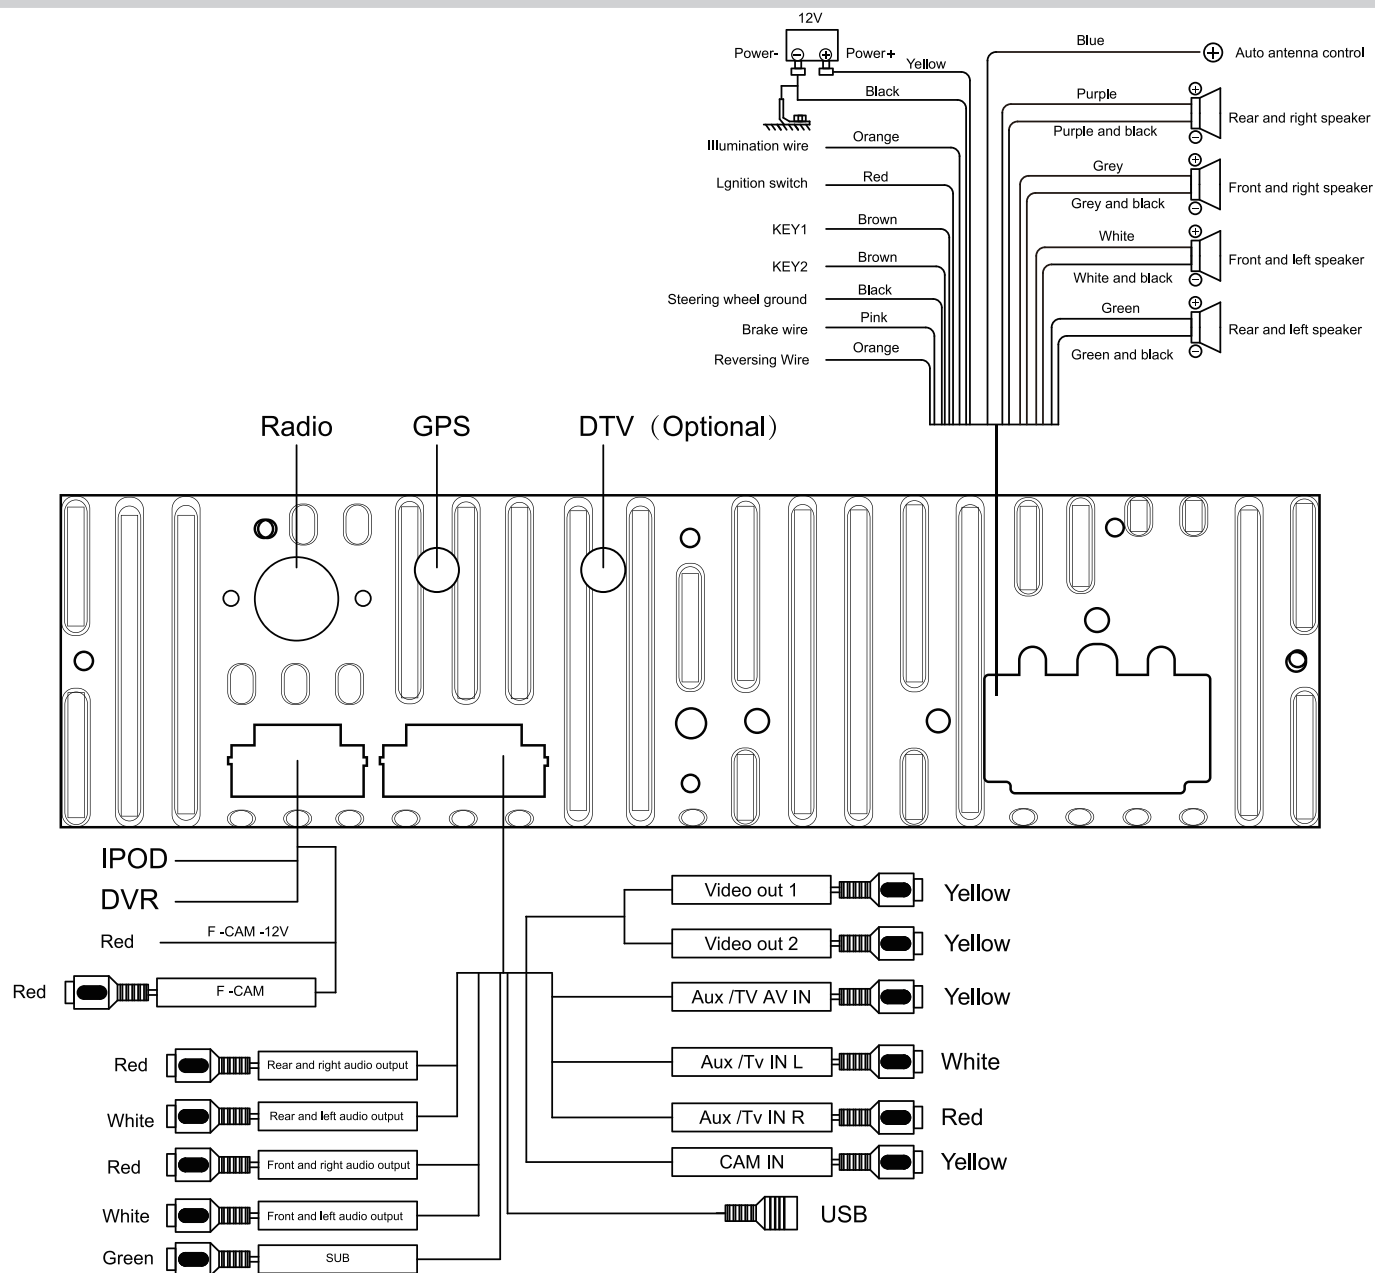

Warning

- **INGESTION HAZARD:** This product remote controller contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted in side any part of body.

WARNING

THIS PRODUCT CONTAINS OR USES A BUTTON CELL BATTERY

If swallowed, a lithium button battery can cause severe or fatal injuries within 2 hours.

Keep batteries out of reach of children.

If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

